

WMFBKGND System Variable — GstarCAD 2027

6429 kbadmin September 26, 2026 [Command Reference](#) 0 19

WMFBKGND System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The WMFBKGND system variable is used to control the display of background when inserting an object as WMF format.

Type	Integer
Saved in	Not saved
Initial value	off

Users can use one of the following way to insert objects:

Export WMF file by WMFOUT command

Copy to clipboard and paste as WMF files

Drag as WMF files

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6429>