

WSCURRENT System Variable — GstarCAD 2027

6435 kbadmin September 26, 2026 [Command Reference](#) 0 5

WSCURRENT System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The WSCURRENT system variable is used to display name of current work space and set specified work space to be current under command prompts.

Type	Strings
Saved in	Not saved
Initial value	Unknown

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6435>