

XFADECTL System Variable — GstarCAD 2027

6441 kbadmin September 26, 2026 [Command Reference](#) 0 8

XFADECTL System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The XFADECTL system variable is used to control the fade degree in reference that editing in-place, this setting only has effect on objects that are not editing in reference.

Type	Integer
Saved in	Registry
Initial value	70
Range	0 ~ 90

This system variable can control the fade degree of alternate object representation that displayed in a dimmed state, such as annotative object alternate scale representations.
The SELECTIONANNODISPLAY system variable controls whether to display alternate scale presentation for annotative objects.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=6441>