

XREFTYPE System Variable — GstarCAD 2027

6447 kbadmin September 26, 2026 [Command Reference](#) 0 18

XREFTYPE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The XREFTYPE system variable is used to control the default reference type when attaching or overlaying external reference.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:** attachment is the default
- 1:** overlay is the default

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)