

ANGDIR System Variable — GstarCAD 2026

8598 kbadmin September 26, 2026 [Command Reference 2026](#) 0 7

ANGDIR System Variable

[GstarCAD 2026](#) · [Command Reference](#)

Function Description:

The ANGDIR system variable is used to set the direction of positive angle.It is measures from angle 0 relative to the orientation of current UCS.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1

System Variable Value:

- 0: anticlockwise
- 1: clockwise

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2027](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=8598>