

DGNFRAME System Variable — GstarCAD 2026

8945 kbadmin September 26, 2026 [Command Reference 2026](#) 0 6

DGNFRAME System Variable

[GstarCAD 2026](#) · [Command Reference](#)

Function Description:

The DGNFRAME system variable is used to determine whether the frame of DGN reference underlay is visible or need to plot in current drawing.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1,2

System Variable Value:

- 0:** do not display or plot the frame of DGN reference underlay.
It will temporarily redisplay the frame when selected or previewed the selection set.
- 1:** display and plot the frame of DGN reference underlay
- 2:** display but do not plot the frame of DGN reference underlay

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2027](#)