

# DIMALTTZ System Variable — GstarCAD 2026

## DIMALTTZ System Variable

[GstarCAD 2026](#) · [Command Reference](#)

### Function Description:

The DIMALTTZ system variable is used to control zero suppression for tolerance.

|               |         |
|---------------|---------|
| Type          | Integer |
| Saved in      | Drawing |
| Initial value | 0       |
| Range         | 0 ~ 15  |

### System Variable Value:

- 0:** suppress zero feet and zero inch
  - 1:** include zero feet and zero inch
  - 2:** include zero feet and suppress zero inch
  - 3:** include zero inch and suppress zero feet
- To suppress leading or trailing zeros. Add the following values to one of the preceding values:
- 4:** suppress leading zero
  - 8:** suppress trailing zero

### Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=8956>