

FRAME System Variable — GstarCAD 2026

FRAME System Variable

[GstarCAD 2026](#) · [Command Reference](#)

Function Description:

The FRAME system variable is used to control how to display the frame for all images, underlays, and clipped xrefs.

Type	Integer
Saved in	Drawing
Initial value	3
Range	0,1,2,3

If the value of FRAME system variable changed, the IMAGEFRAME, DWFFRAME, PDFFRAME, DGNFRAME, and XCLIPFRAME settings are changed to match the value of FRAME.

System Variable Value:

- 0:** do not display and plot frame
Temporarily display frame when selecting or previewing objects
 - 1:** display and plot frame
 - 2:** display the frame, but do not to plot it
 - 3:** display the frame, but do not to plot it
- Note:** only when the frame settings for a certain object is different from other objects, the settings of FRAME restore to 3.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2027](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=9166>