

FRONTZ System Variable — GstarCAD 2026

9168 kbadmin September 26, 2026 [Command Reference 2026](#) 0 21

FRONTZ System Variable

[GstarCAD 2026](#) · [Command Reference](#)

Function Description:

The FRONTZ system variable is used to store the offset from current front clipped plane to target plane in drawing units.
(Read-Only)

Type	Real
Saved in	Drawing
Initial value	0.0000

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2027](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=9168>