

# BLOCKTOXREF command


2006 GstarCAD MY /KW August 4, 2021 [CAD Commands](#) 0 2039

The **BLOCKTOXREF** command Replace all instances of a standard block with an xref. Unbind xrefs that are bound.

**Command Access :**


**Menu :** Express>Blocks>Convert Block to Xref

**Command Entry :** BLOCKTOXREF

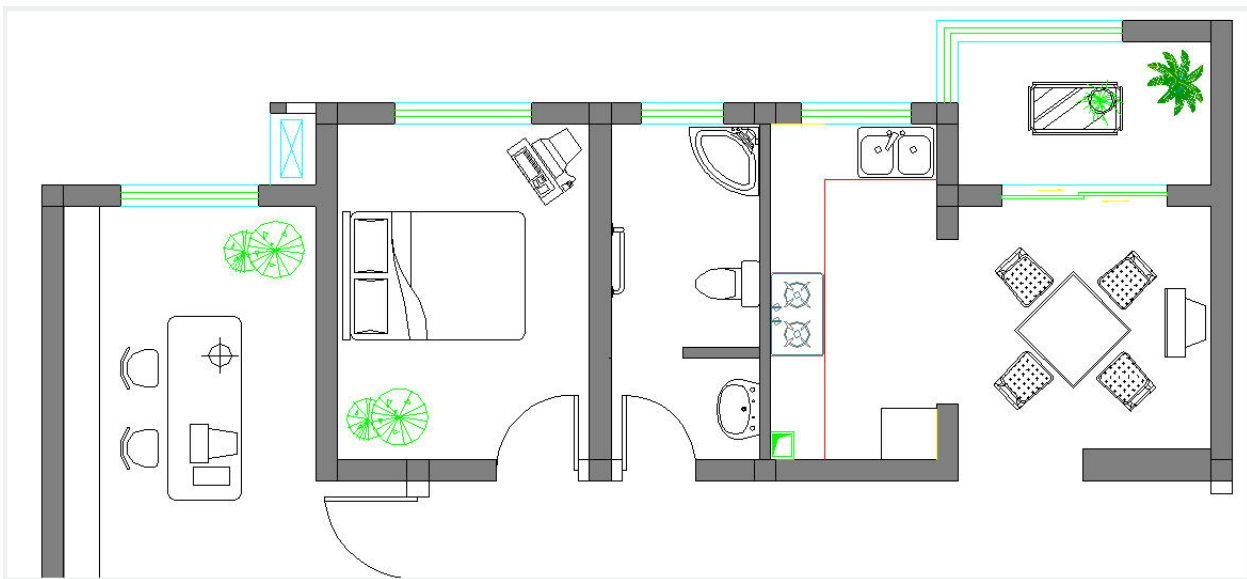



BLOCKTOXREF searches the entire drawing for references to a specified block name and replaces them with an xref that you specify. You can have the unreferenced block purged when done.

In BLOCKTOXREF dialog box. Select a block to replace: Table and 4 chairs. Then select: OK

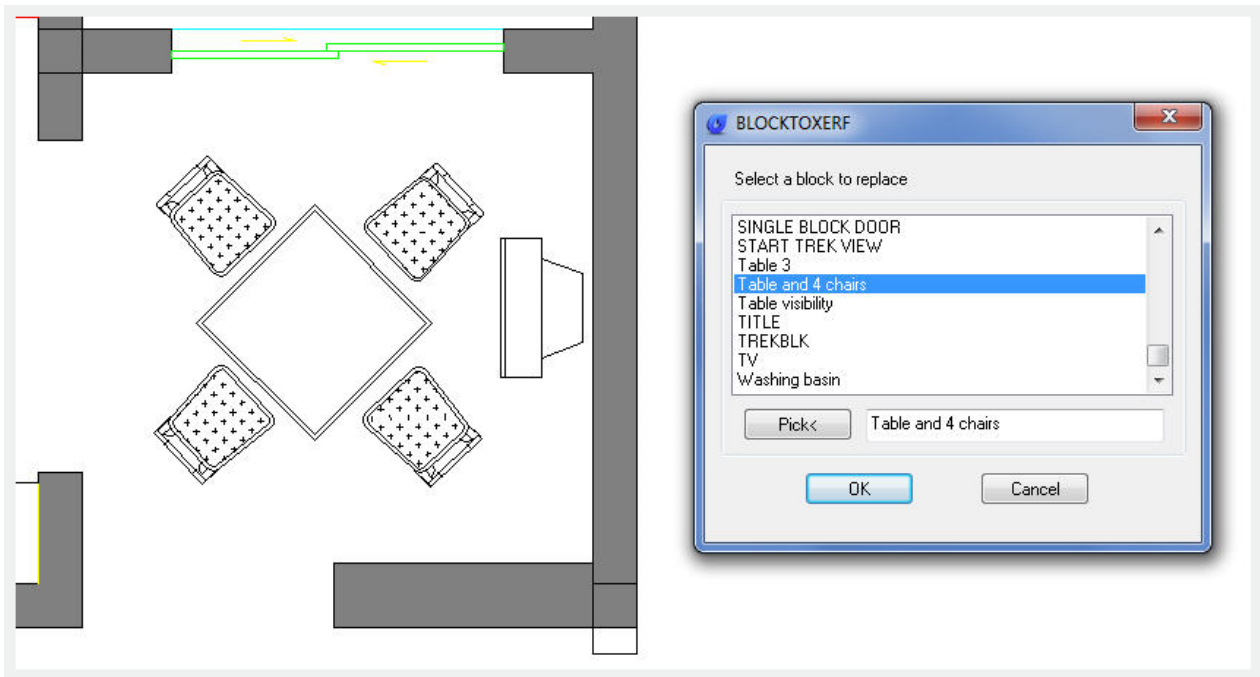

In Select a Xref file. Select the Xref you want. Then select: open

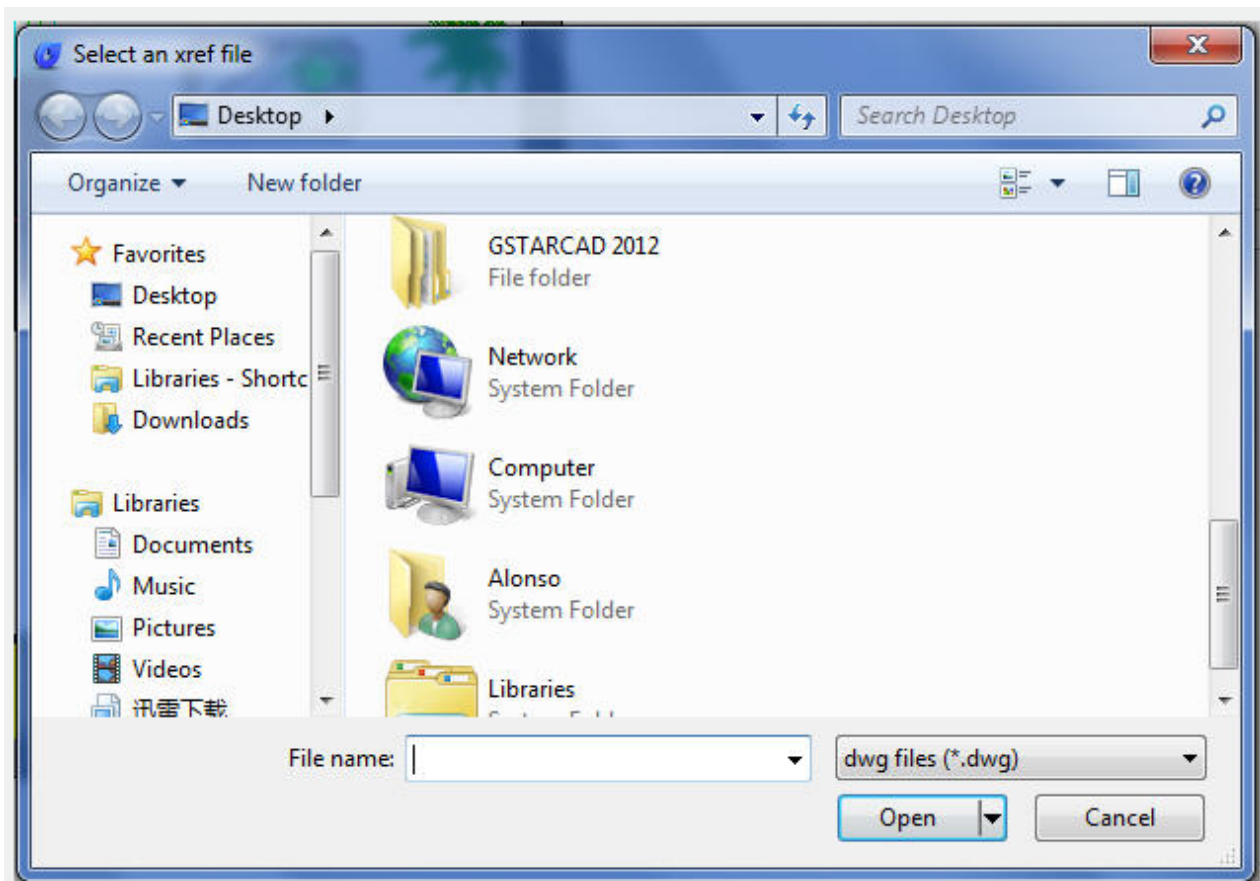

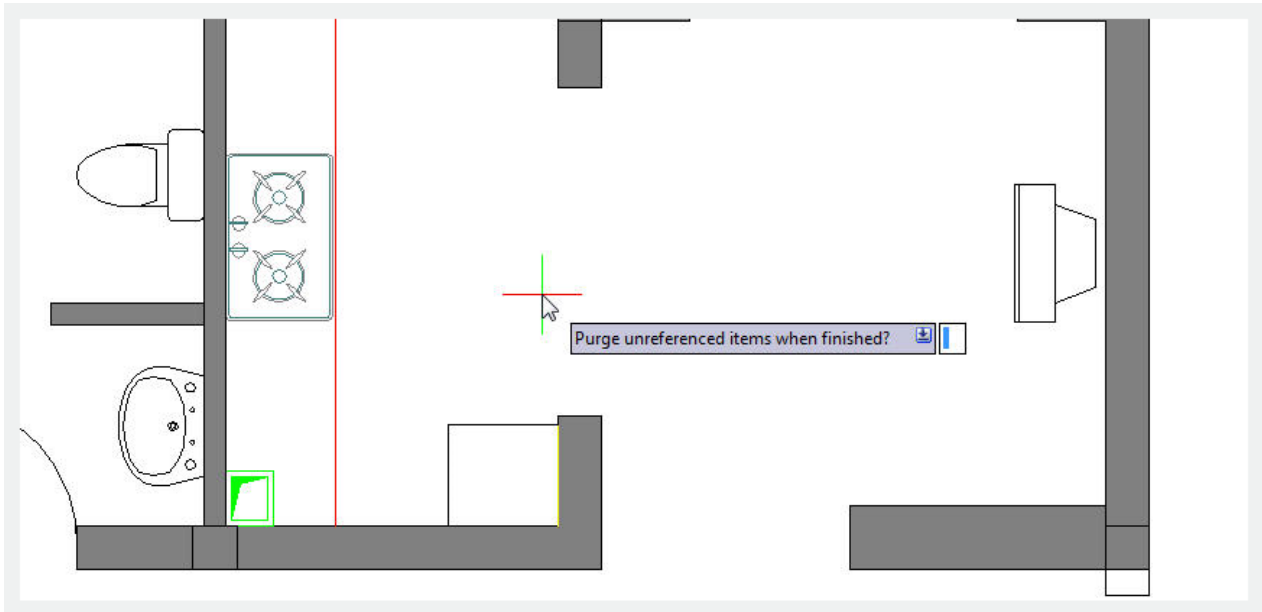

Purge unreferenced items when finished? Yes/No

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=2006>